

Cisco-360-Console

Host	Line	Description
R1	Line 1	1841
R2	Line 2	1841
R3	Line 3	1841
R4	Line 4	2811
R5	Line 5	2811
R6	Line 6	2811
FRS	Line 7	2610
CAT1	Line 8	3560
CAT2	Line 9	3560
CAT3	Line 10	3560
CAT4	Line 11	3560
RPC	-	Power Control

If you are unable to reverse telnet to a device, you can clear the line connected to the device console with the command:

Translating "r1"

Trying r1 (1.1.1.1, 2001)...

%Connection refused by remote host

2511> clear line 1 (X = line number of device from chart)

For example: clear line 1           clears the line for R1  
                   clear line 8           clears the line for CAT1  
                   clear line 9           clears the line for CAT2