

Host	Line	Description
R1	Line 41	2611XM
R2	Line 42	3725
R3	Line 43	3640
R4	Line 44	3640
R5	Line 45	3640
R6	Line 46	3640
R7	Line 47	7206VXR
R8	Line 48	7206VXR
R9	Line 49	7206VXR
CAT1	Line 50	3550
CAT2	Line 51	3550
BB1	Line 52	2611XM
BB2	Line 53	2611XM
BB3	Line 54	3660
FRS	Line 55	3660
LS1010	Line 56	LS1010
RPC	Telnet	Remote Power

If you are unable to reverse telnet to a device, you can clear the line connected to the device console with the command:

Translating "r1"

Trying r1 (1.1.1.1, 2041)...

% Connection refused by remote host

2511> clear line 41 (X = line number of device from chart)

For example:	clear line 41	clears the line for R1
	clear line 50	clears the line for CAT1
	clear line 55	clears the line for FRS